

<- Back

Forward ->

Document ID# 790249
2003 Chevrolet Chevy Suburban - 4WD

Print

DTC C0186

Circuit Description

With the vehicle at rest the lateral accelerometer voltage should be 2.5 volts. The scan tool will report lateral accelerometer as 2.5 volts. The sensor bias compensates for electronic signal errors, temperature changes, manufacturing differences and monitoring differences.

Conditions for Running the DTC

- The ignition is ON.
- The vehicle speed is greater than 5 km/h (3 mph).

Conditions for Setting the DTC

The lateral accelerometer input voltage is less than 1.17 volts or greater than 3.83 volts for more than 2 minutes.

Action Taken When the DTC Sets

- The code is displayed on the scan tool as DTC C0186.
- The rear wheel steering system remains functional.

Conditions for Clearing the DTC

- The conditions for the DTC are not currently present.
- The rear wheel steering control module receives a clear code command from the scan tool.
- The DTC clears after 100 malfunction free ignition cycles.


Diagnostic Aids

- Inspect for poor connections at the harness connector of the rear wheel steering control module and Lat/Yaw sensor connector. Refer to [Testing for Intermittent and Poor Connections](#) , and to [Connector Repairs](#) in Wiring Systems.
- Observe the rear wheel steering mode select switch. If all of the mode indicator LEDs are illuminated the rear wheel steering control module has lost its memory settings and the scan tool must be used to re-calibrate the rear wheel steering alignment data in the rear wheel steering control module. Refer to [Measuring Wheel Alignment](#) .
- The system can have a DTC C0186 and 4-Wheel Steering will still function normally.

Lateral Accelerometer Operating Parameters

- Proportional output voltage 0.25 to 4.75 volts
- 0 lateral accel = 2.5 volts
- Operating range is +/- 1.5 Gs
- Sealed self contained unit two sensors in one housing

FIGURE Lateral Accelerometer(c)

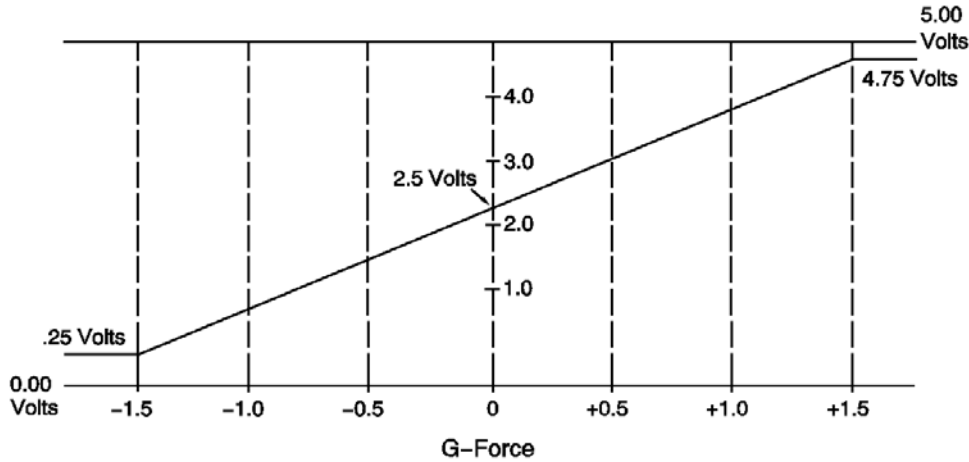

Test Description

The numbers below refer to the step numbers on the diagnostic table.

3. Tests for the proper operation of the circuit in the high voltage range.
4. Tests for the proper operation of the circuit in the low voltage range. If the fuse in the jumper opens when you perform this test, the signal circuit is shorted to voltage.
5. Tests for a short to ground in the 5 volt reference circuit.

Step	Action	Values	Yes	No
1	Did you perform a Diagnostic System Check - Rear Wheel Steering?	--	Go to Step 2	Go to Diagnostic System Check - Rear Wheel Steering
2	1. Install a scan tool. 2. Turn the ignition switch to the ON position, with the engine OFF. 3. With a scan tool, observe the Lateral Accelerometer Sensor Input parameter in the Rear Wheel Steering data list. Does the scan tool indicate that the parameter is within the specified range?	2.40-2.60 V	Go to Diagnostic Aids	Go to Step 3
	1. Turn the ignition switch to the OFF position. 2. Disconnect the Yaw rate sensor/Lateral Accelerometer sensor. 3. Turn ON the ignition, with the engine OFF.			

3	<p>4. With a scan tool, observe the Lateral Accelerometer Sensor Input parameter.</p> <p>Does the scan tool indicate that the parameter is greater than the specified value?</p>	4.85 V	Go to Step 4	Go to Step 8
4	<p>1. Turn the ignition switch to the OFF position. 2. Connect a 3 Amp fused jumper wire between the signal circuit of the lateral accelerometer sensor and the ground circuit of the yaw rate sensor. 3. Turn the ignition switch to the ON position, with the engine OFF. 4. With a scan tool, observe the Lateral Accelerometer Sensor Input parameter.</p> <p>Does the scan tool indicate that the parameter is less than the specified value?</p>	0.15 V	Go to Step 5	Go to Step 9
5	<p>1. Turn the ignition switch to the OFF position. 2. Disconnect the fused jumper wire. 3. Connect a 3 Amp fused jumper wire between the 5 volt reference circuit of the lateral accelerometer sensor and the signal circuit of the lateral accelerometer sensor. 4. Turn the ignition switch to the ON position, with the engine OFF. 5. With a scan tool, observe the Lateral Accelerometer Sensor Input parameter.</p> <p>Does the scan tool indicate that the parameter is greater than the specified value?</p>	4.85 V	Go to Step 7	Go to Step 6
6	<p>Test the 5 volt reference circuit of the lateral accelerometer sensor for a short to ground. Refer to Circuit Testing and Wiring Repairs in Wiring Systems.</p> <p>Did you find and correct the condition?</p>	--	Go to Step 15	Go to Step 12
7	<p>Test the 5 volt reference circuit of the lateral accelerometer sensor for a short to voltage, a high resistance, or an open. Refer to Circuit Testing and Wiring Repairs in Wiring Systems.</p> <p>Did you find and correct the condition?</p>	--	Go to Step 15	Go to Step 11
8	<p>Test the signal circuit of the lateral accelerometer sensor for a short to ground. Refer to Circuit Testing and Wiring Repairs in Wiring Systems.</p> <p>Did you find and correct the condition?</p>	--	Go to Step 15	Go to Step 12
	Test the signal circuit of the lateral accelerometer			

9	<p>sensor for a short to voltage, a high resistance, or an open. Refer to Circuit Testing and Wiring Repairs in Wiring Systems.</p> <p>Did you find and correct the condition?</p>	--	Go to Step 15	Go to Step 10
10	<p>Test the ground circuit of the lateral accelerometer sensor for a short to voltage, a high resistance, or an open. Refer to Circuit Testing and Wiring Repairs in Wiring Systems.</p> <p>Did you find and correct the condition?</p>	--	Go to Step 15	Go to Step 12
11	<p>Inspect for poor connections at the harness connector of the lateral accelerometer sensor. Refer to Testing for Intermittent and Poor Connections and Connector Repairs in Wiring Systems.</p> <p>Did you find and correct the condition?</p>	--	Go to Step 15	Go to Step 13
12	<p>Inspect for poor connections at the harness connector of the rear wheel steering control module. Refer to Testing for Intermittent and Poor Connections and Connector Repairs in Wiring Systems.</p> <p>Did you find and correct the condition?</p>	--	Go to Step 15	Go to Step 14
13	<p>Replace the Yaw rate sensor/Lateral Accelerometer sensor. Refer to Yaw Rate Sensor/Lateral Accelerometer Replacement in Rear Wheel Steering.</p> <p>Did you complete the replacement?</p>	--	Go to Step 15	--
14	<p>Important</p> <p>Perform the Learn Alignment procedure. Refer to Measuring Wheel Alignment .</p> <p>Replace the rear wheel steering module. Refer to Rear Wheel Steering Control Module Replacement .</p> <p>Did you complete the replacement?</p>	--	Go to Step 15	--
15	<ol style="list-style-type: none"> 1. Use the scan tool in order to clear the DTCs. 2. Operate the vehicle within the Conditions for Running the DTC as specified in the supporting text. <p>Does the DTC reset?</p>	--	Go to Step 2	System OK

<- Back

Forward ->

Document ID# 790249
2003 Chevrolet Chevy Suburban - 4WD

Print